


REMOVAL

WARNING: On vehicles equipped with airbags, disable the supplemental restraint system before attempting any steering wheel, steering column, driver airbag, passenger airbag, seat belt tensioner, side curtain airbag, front impact sensor, side impact sensor, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the supplemental restraint system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury.

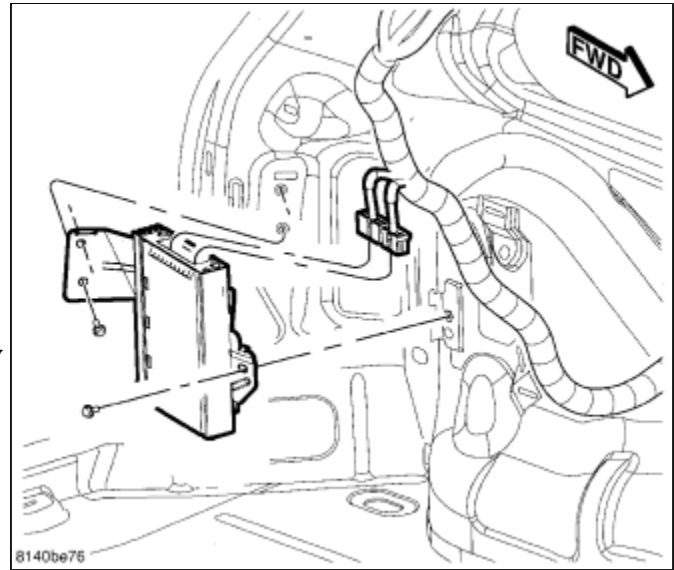

1. Disconnect and isolate the battery negative cable.
2. Remove the left quarter trim panel.
3. Disconnect the two wire harness connectors from the amplifier.
4. Remove the mounting fasteners.
5. Remove the amplifier.