


## REMOVAL

1. Before proceeding with the following repair procedure, review all warnings and cautions. (Refer to 23 - BODY/SEATS - WARNING)
2. Move the seat to the forward position and disconnect and isolate the batter negative cable.
3. Remove the bolts (2) and the clamps (1) and remove the seat cushion.
4. Disconnect the electrical connector, if equipped.

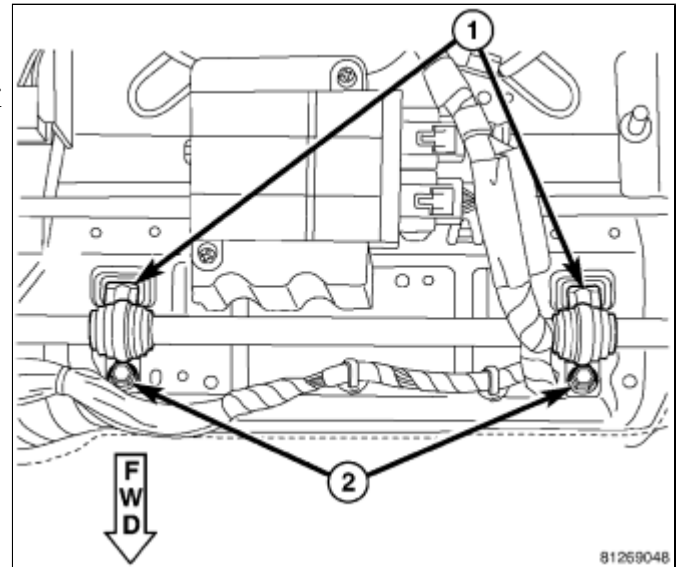

5. Separate the j-straps (1 & 2) and seat cushion cover and foam.

