


FRAME DIMENSIONS

Frame dimensions are listed in metric scale. All dimensions are from center to center of Principal Locating Point (PLP), or from center to center of PLP and fastener location.


VEHICLE PREPARATION

Position the vehicle on a frame alignment rack, refer to instructions provided with equipment being used. Adjust the vehicle PLP heights to the specified dimension above the work surface (datum line). Vertical dimensions can be taken from the datum line to the locations indicated were applicable.

DESCRIPTION	FIGURE
FRAME DIMENSIONS - BOTTOM VIEW	FRAME DIMENSIONS - BOTTOM VIEW
FRAME DIMENSIONS - SIDE VIEW	FRAME DIMENSIONS - SIDE VIEW

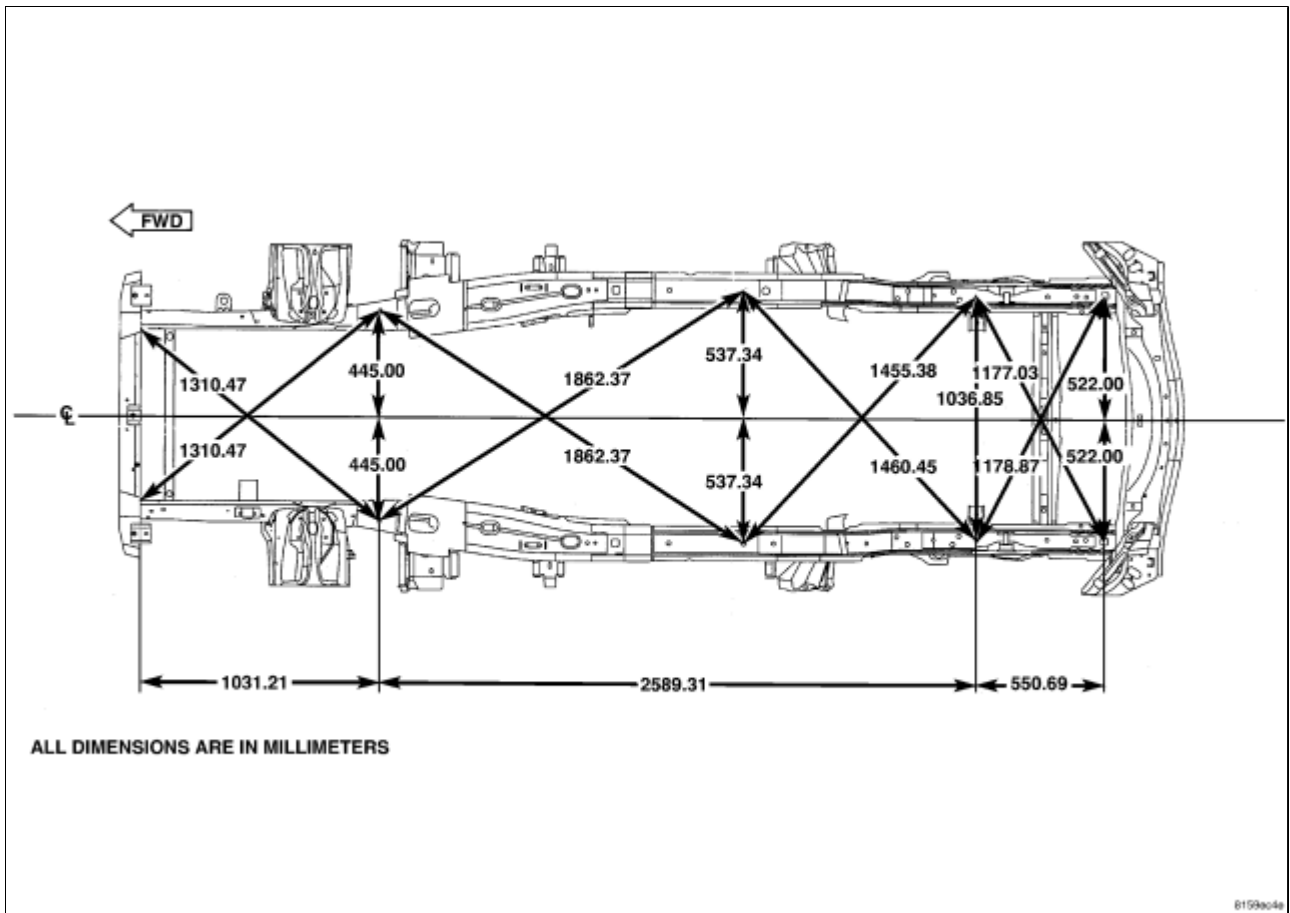

FRAME DIMENSIONS - BOTTOM VIEW

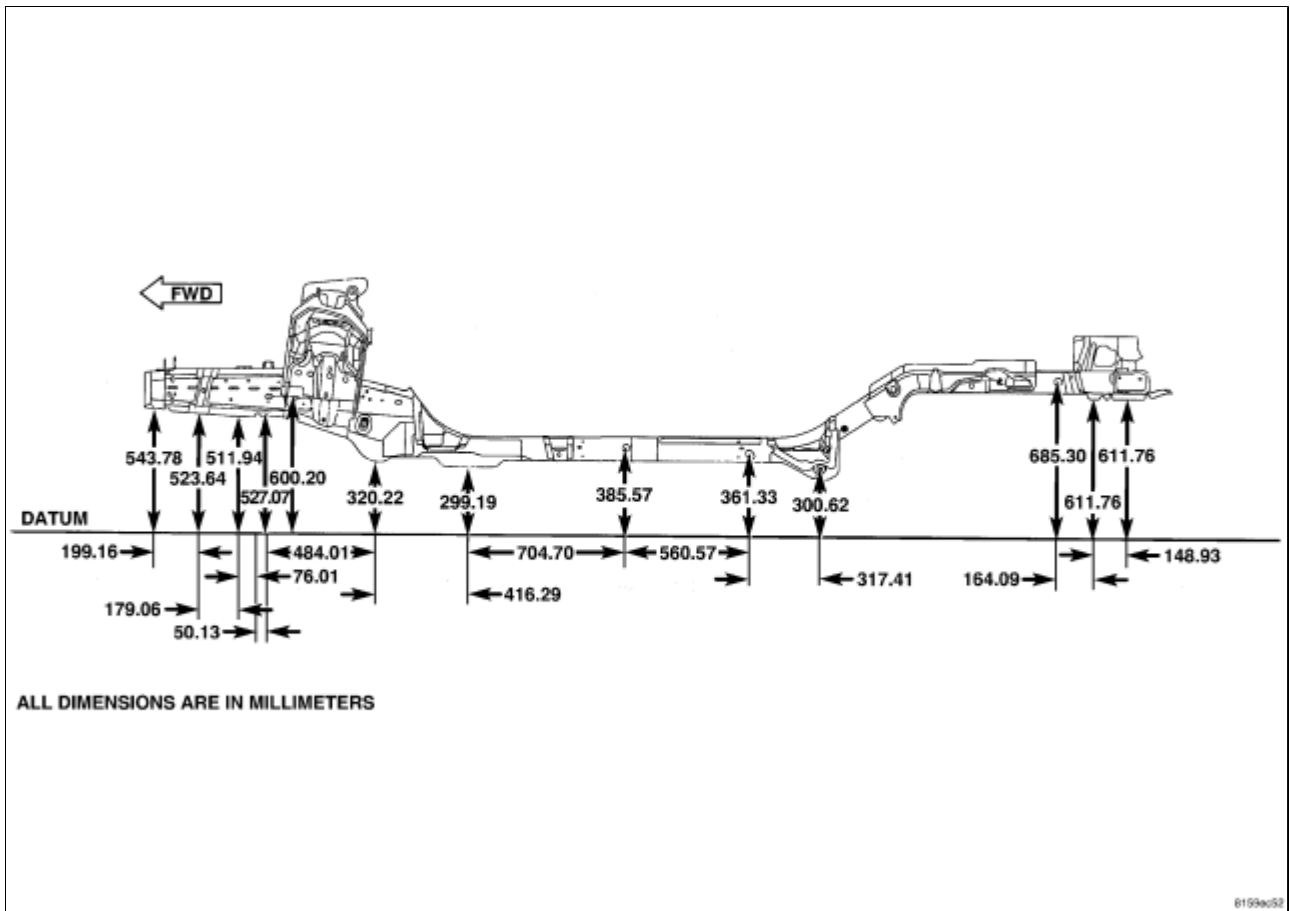

FRAME DIMENSIONS - SIDE VIEW