


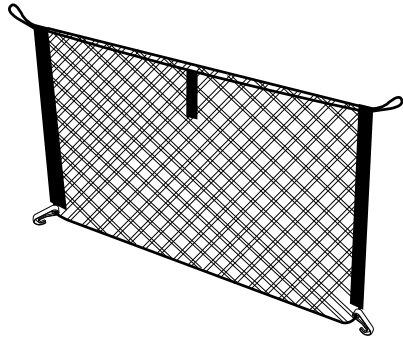


# JEEP COMPASS / PATRIOT


## Convenience Net




**A**

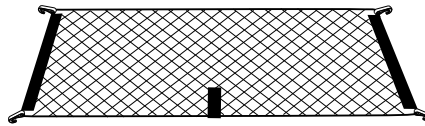

**B**

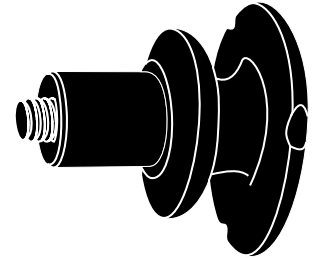


**C**



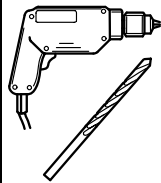


1/4" & 1/2"

### Floor Net



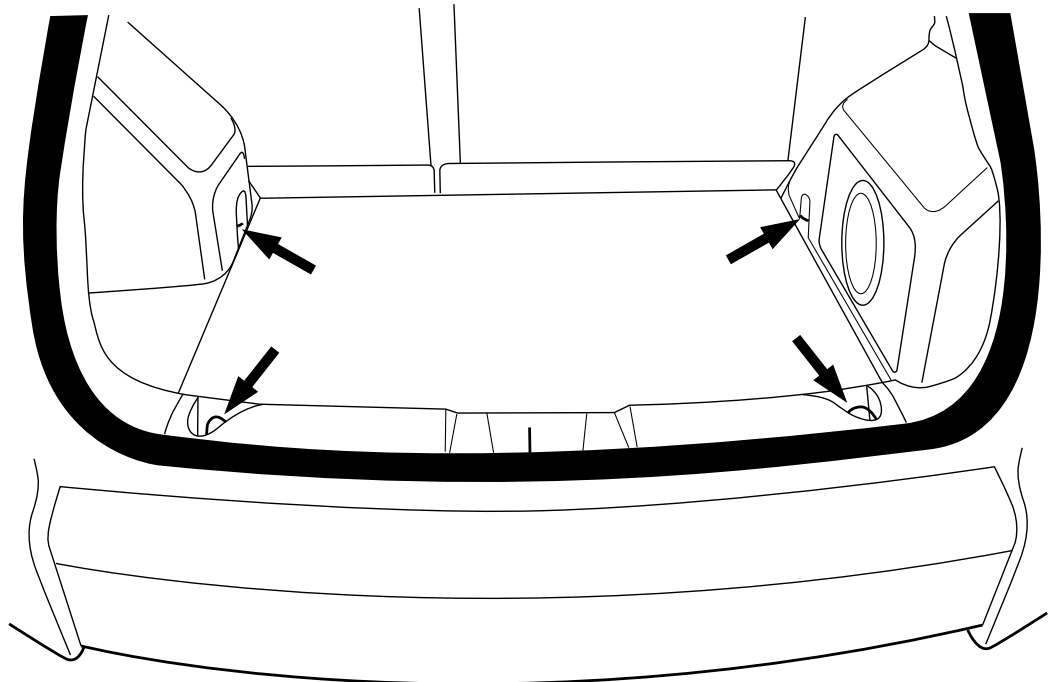


**1**

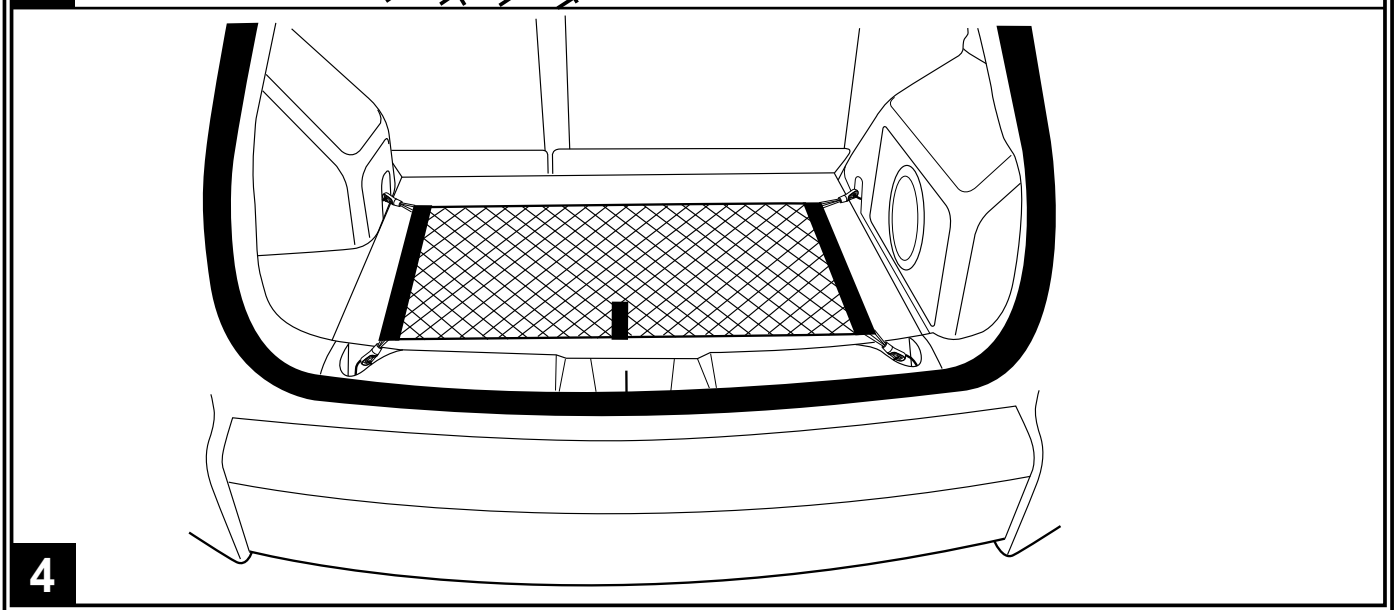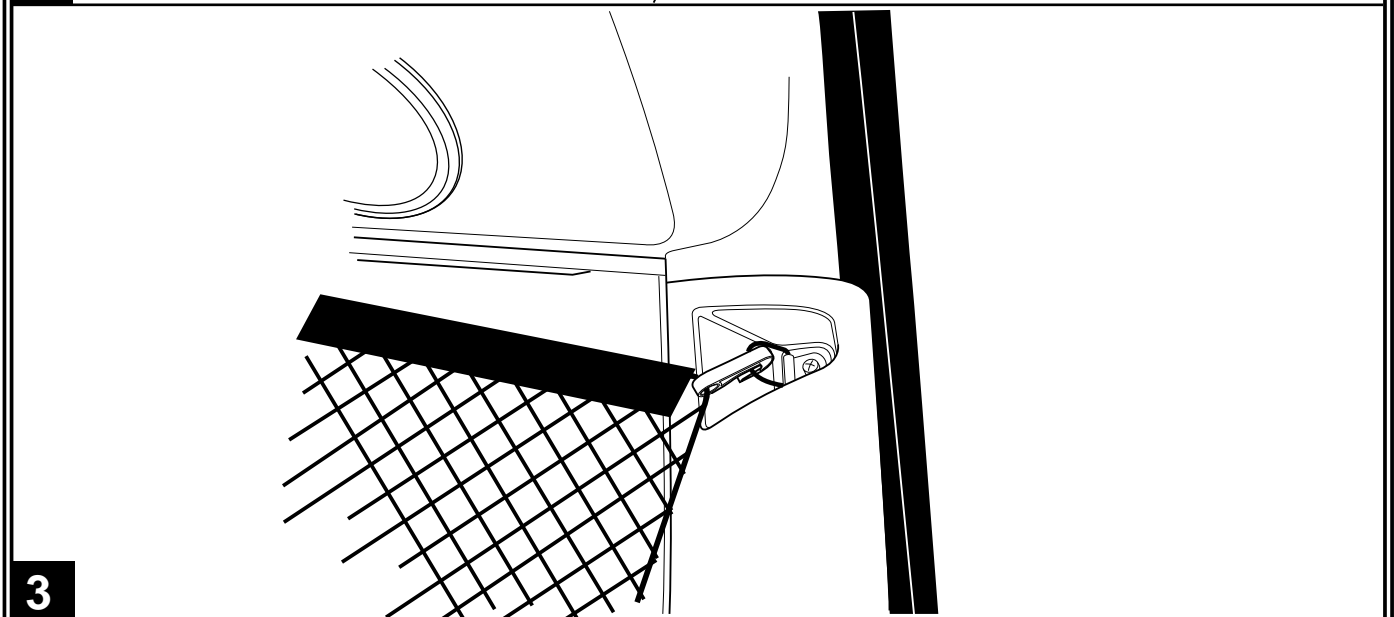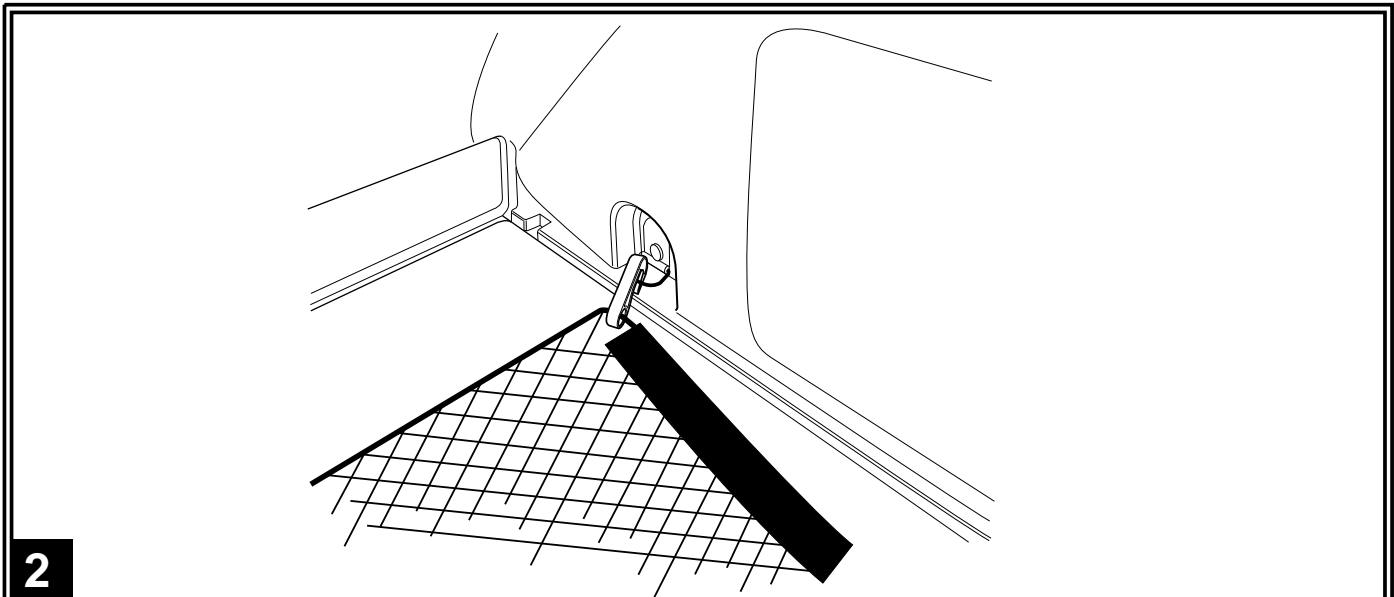


## Envelope Net

- Mark drilling location on trim panel
- Drill 1/4" pilot hole
- Enlarge hole with 1/2" drill bit

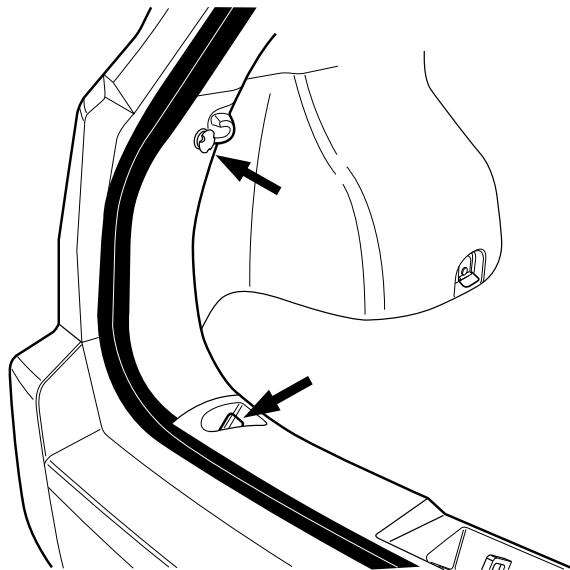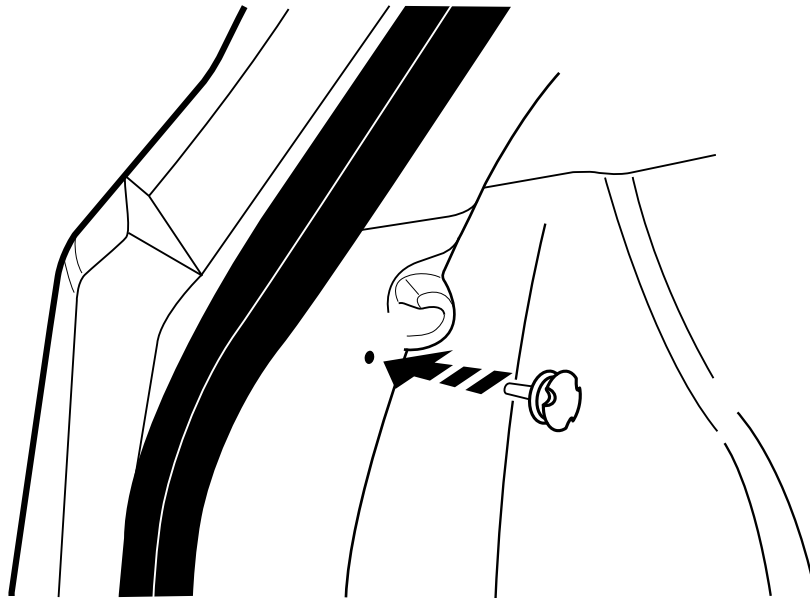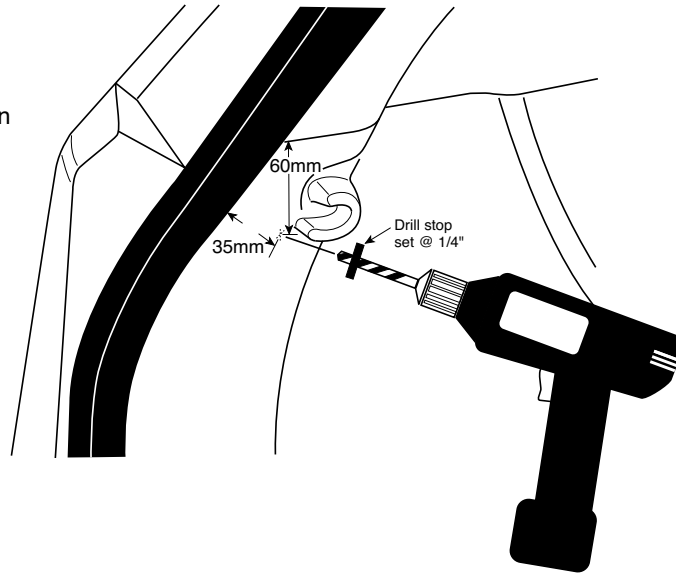

8

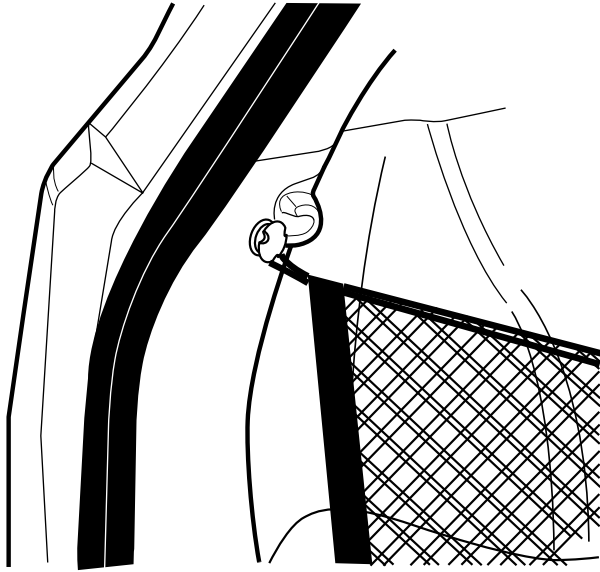

9

