

**GB** INSTALLATION INSTRUCTION REAR RUBBER SPLASH GUARDS

**E** INSTRUCCIONES DE MONTAJE GUARDABARROS TRASEROS DE GOMA


**F** NOTICE DE MONTAGE BAVETTES GARDE-BOUE EN CAOUTCHOUC ARRIÈRE

Subject to alteration without notice  
Reservadas modificaciones técnicas  
Sous réserve de modifications techniques

Expert Fitment Required  
Montaje sólo por el concesionario  
Montage par spécialiste nécessaire


06-12-2001 K6858519

© DAIMLERCHRYSLER

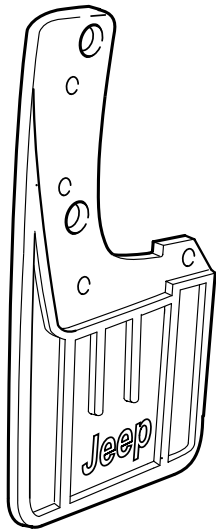


**A**

L

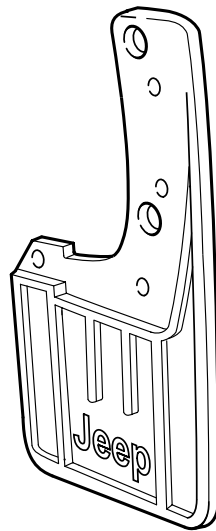


**B**

R

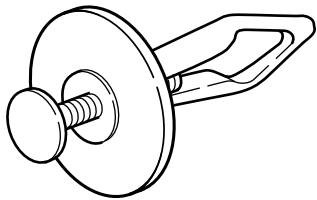


**C**

6x

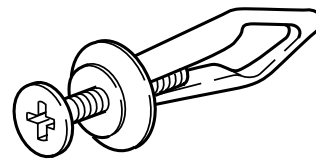



**D**

2x

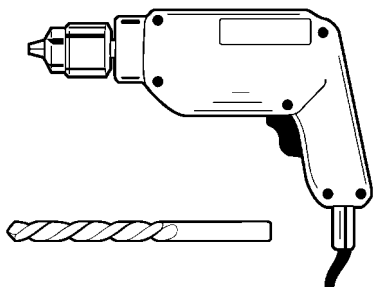


1/4"

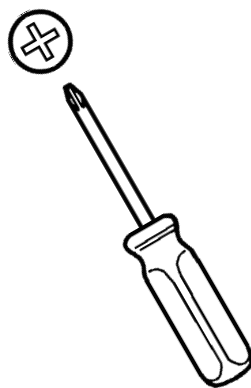

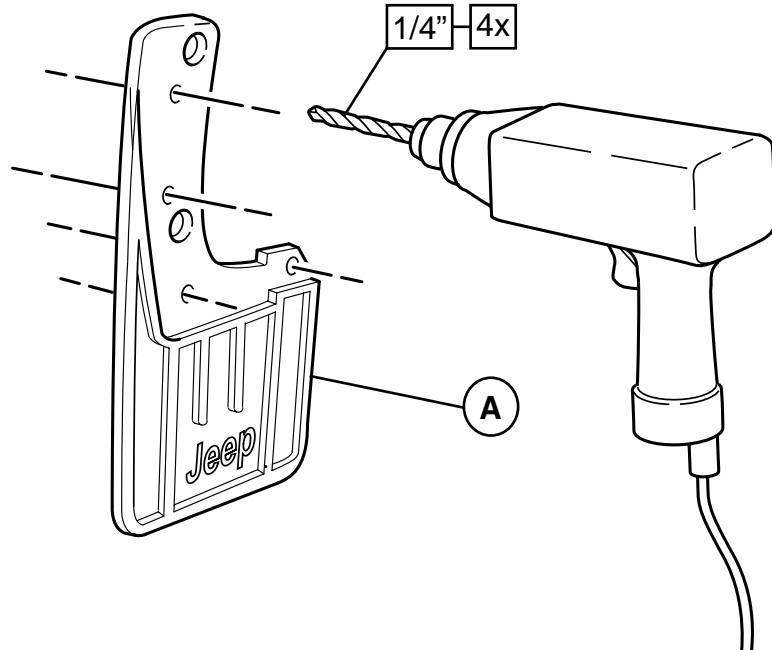


L/R

1

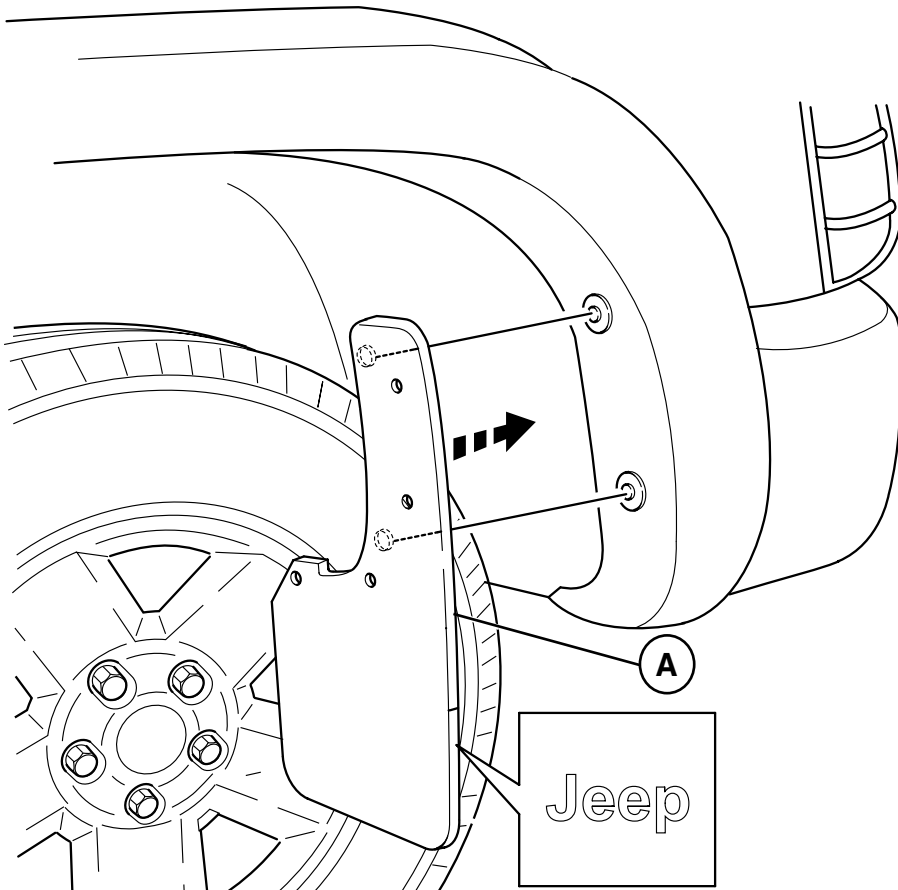


L/R

2

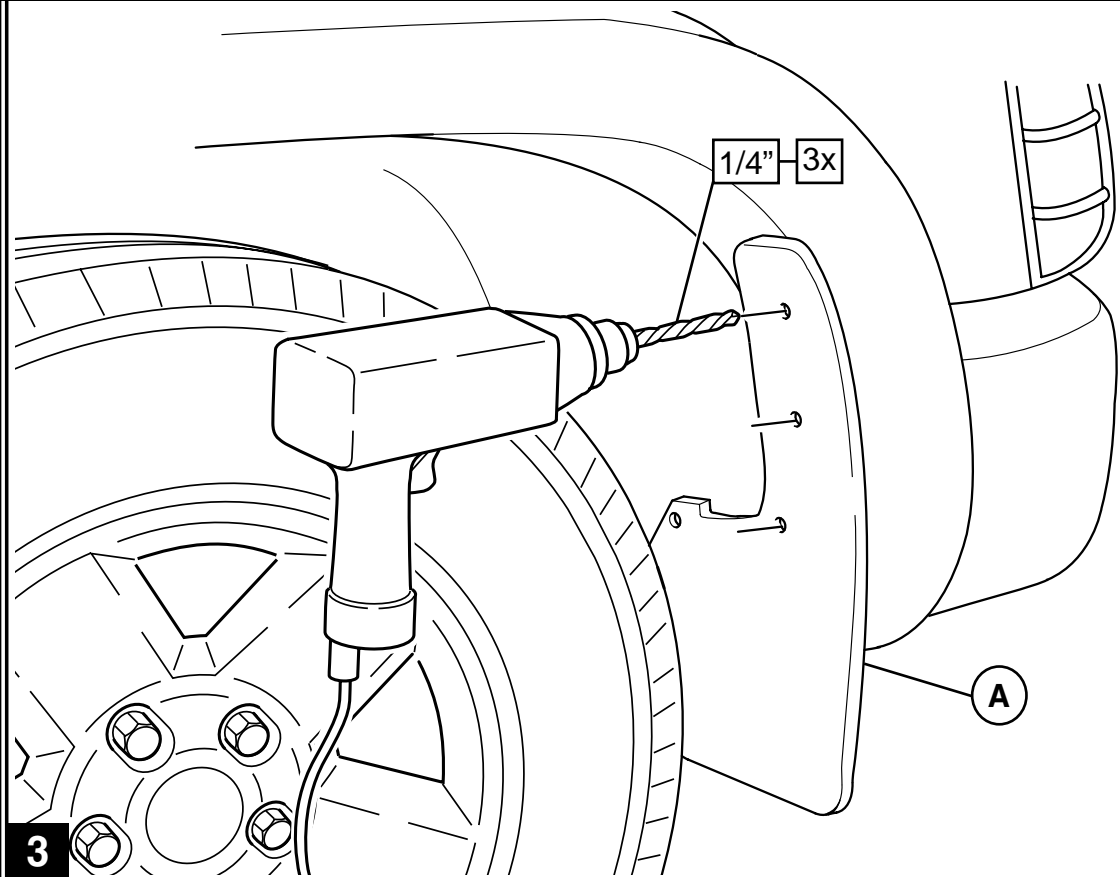

3

L/R

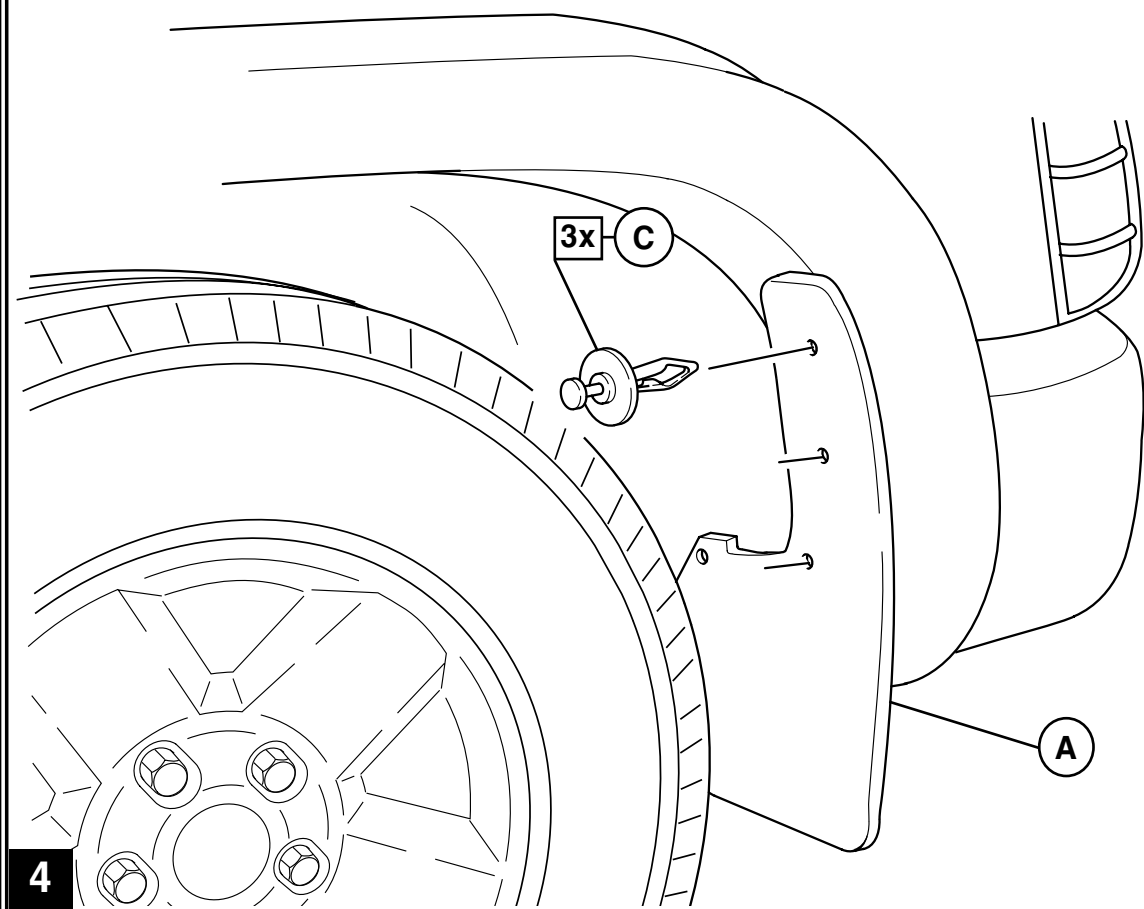

4

L/R

